


## Instructions for 1000ml and 2000ml Dispenser


Read complete instructions before proceeding

### TO OPEN DISPENSER

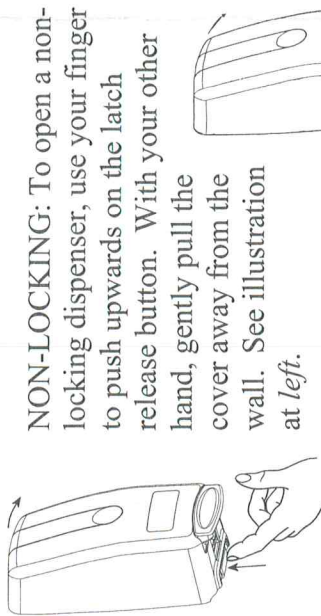


**NON-LOCKING:** To open a non-locking dispenser, use your finger to push upwards on the latch release button. With your other hand, gently pull the cover away from the wall. See illustration at *left*.

**LOCKING:** To open a locking dispenser, insert key into keyhole and push upwards on the latch release button. With your other hand, gently pull the cover away from the wall. See illustration at *right*.

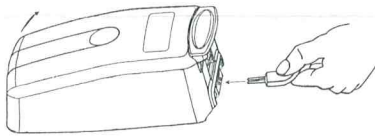

### TAPE MOUNTING

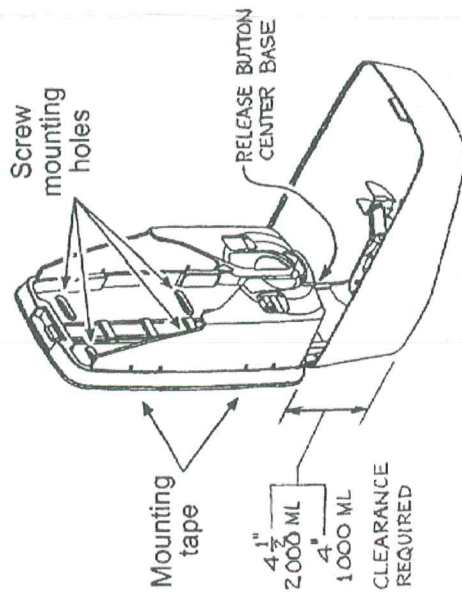

Extreme caution must be exercised to insure mounting surface is flat, free of imperfections, clean and dry. Tape mounting is only recommended for mirrors, or other similar flat surfaces free of imperfections.

- Clean flat surface with the provided towelette or other surfaces with an abrasive cleanser prior to using the towelette (depending on surface condition).
- Dry surface thoroughly.
- Make sure the dispenser is level before fixing it to its final position. Leave at least 4" clearance between the bottom of the dispenser and the closest obstacle.
- Remove protective backing from the mounting tape as shown.
- Firmly press the dispenser against the mounting surface for 10 seconds. Open the dispenser cover and press directly on the back plate for an additional 30 seconds. Allow 24 hours before loading the unit.

### SCREW MOUNTING

Screw mounting is recommended for surfaces that do not meet the standards set forth for Tape Mounting in the section above. Use at least 4 screws.

- Hold the dispenser against the wall in the desired position. There must be at least 4" of clearance between the bottom of the dispenser and the nearest obstacle. Make sure the dispenser is level.
- Open the dispenser and mark the screw hole location on the wall. (see first section for opening instructions)
- Remove the dispenser from the wall and drill holes in the location you just marked. Use the appropriate drill size for #10 x 1" self tapping screws.
- Place appropriate sized anchors into the newly drilled holes. The anchors must

- be placed so they are flush against the wall.
- Place the open dispenser on to the wall and align it with the newly drilled holes. Insert and carefully tighten #10 x 1" self tapping screws through the screw mounting holes in the dispenser back plate. Be sure not to over-tighten the screws.

### LOADING INSTRUCTIONS

- Take one refill pouch and slide the dome pump and tip into the dispenser.
- Close the dispenser gently.
- Activate the push bar as necessary to prime the pump.

